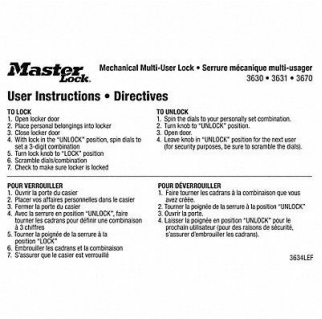

Master Lock Mechanical Multi-User Lock • Serrure mécanique multi-usager
3630 • 3631 • 3670

User Instructions • Directives

TO LOCK
1. Open locker door.
2. Place personal belongings into locker.
3. Close locker door.
4. With lock in the "UNLOCK" position, spin dials to set a 3-digit combination.
5. Turn lock knob to "LOCK" position.
6. Scramble dials/combination.
7. Check to make sure locker is locked.

TO UNLOCK
1. Spin the dials to your personally set combination.
2. Turn knob to "UNLOCK" position.
3. Open door.
4. Leave knob in "UNLOCK" position for the next user (for security purposes, be sure to scramble the dials).

POUR VERROUILLER
1. Ouvrir la porte du casier
2. Placer vos affaires personnelles dans le casier
3. Fermer la porte du casier
4. Avec la serrure en position "UNLOCK", faire tourner les cadrans pour définir une combinaison à 3 chiffres
5. Tourner la poignée de la serrure à la position "LOCK"
6. Embrouiller les cadrans et la combinaison
7. S'assurer que le casier est verrouillé

POUR DÉVERROUILLER
1. Faire tourner les cadrans à la combinaison que vous avez créée.
2. Tourner la poignée de la serrure à la position "UNLOCK"
3. Ouvrir la porte.
4. Laisser la poignée en position "UNLOCK" pour le prochain utilisateur (pour des raisons de sécurité, s'assurer d'embrouiller les cadrans).

3634LEF

MASTER LOCK Instruction Sticker, 31MH10

Item **31YIU8206** Mfr. Model **3634LEF**

Product Details

Item Reference: **31MH10**	Width (in): **7**
Brand: **MASTER LOCK**	Height (in): **0.125**
Weight (lb): **0.63**	Harmonization Code: **8505191000**
Length (in): **5**	Country of Origin: **United States**

Product Description

Instruction Sticker English French Lock Brand MASTER LOCK For Use With 3630 3631 3670